



EVO


835E40

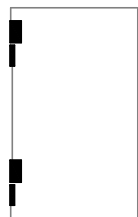


Fittings required
Fissaggi richiesti
Benötigtes Befestigungsmaterial

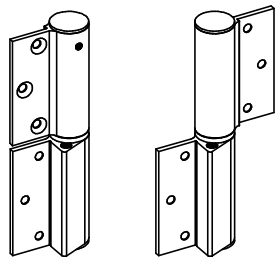


Tools Required
Strumenti Richiesti
Benötigtes Werkzeug

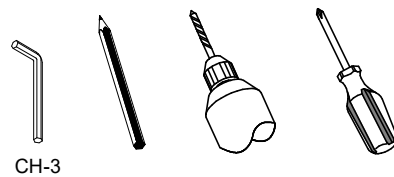


1

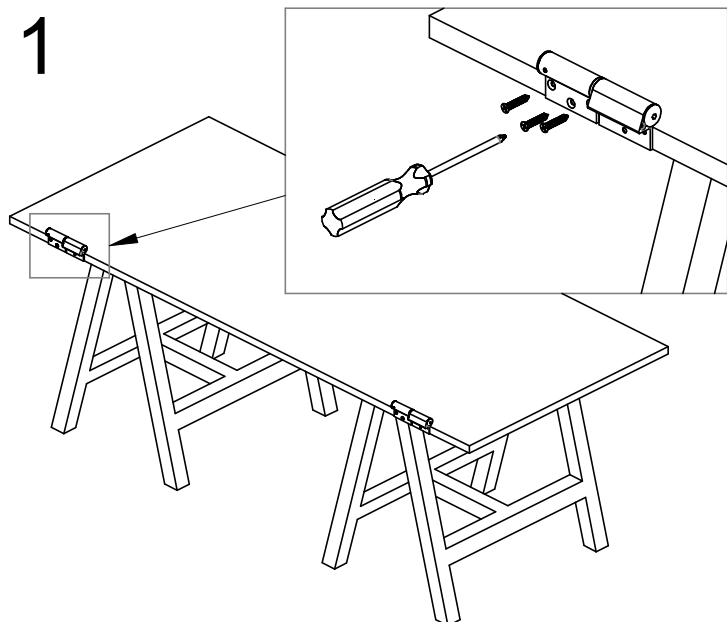


2

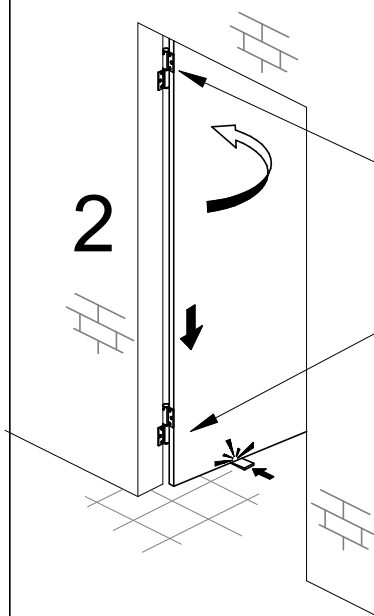


3

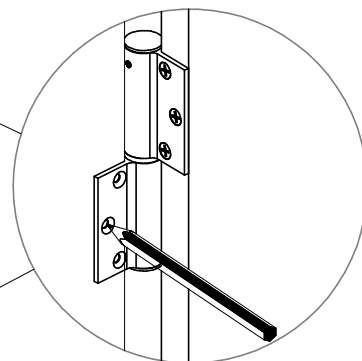


4

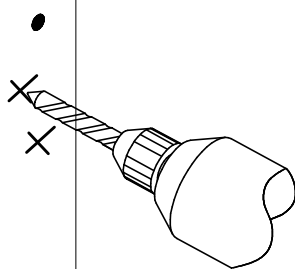

5



6

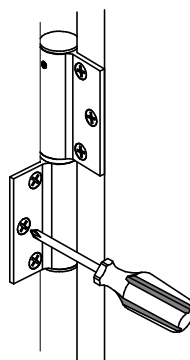


Repeat the same step (4-5-6)
for the lower hinge


Ripetere le stesse operazioni dei
punti (4-5-6) per la cerniera
superiore

Schritte 4-5-6 für unteres Band
wiederholen


7

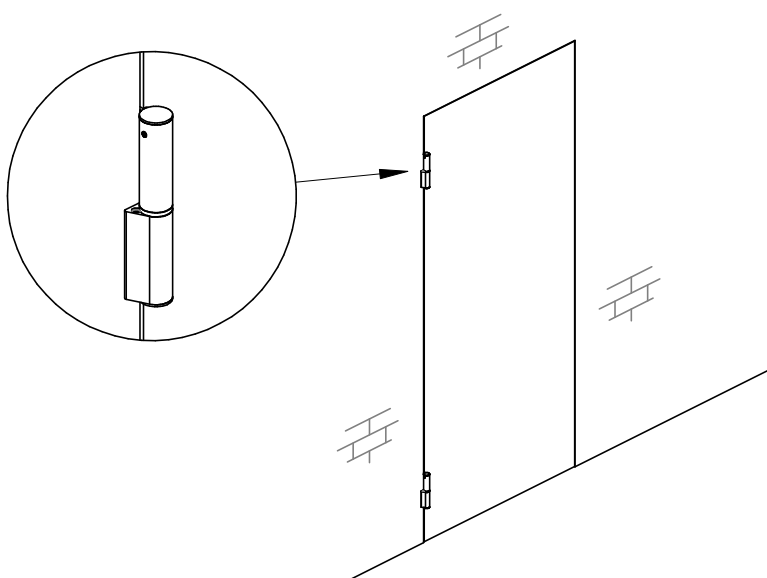

8


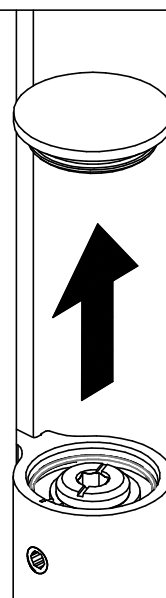


9

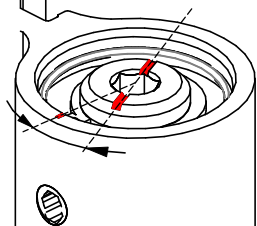

10



Left Door
Porta Sinistra
Linke Tür

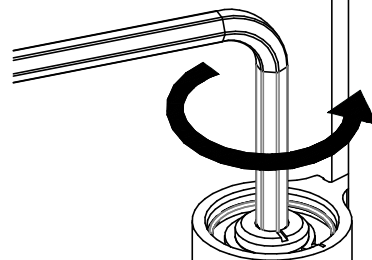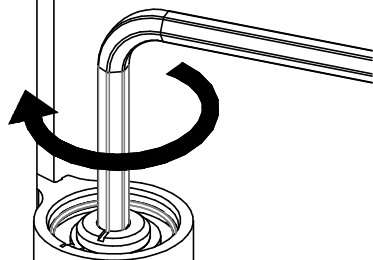

Right door
Porta Destra
Rechte Tür


11

Left Door
Porta Sinistra
Linke Tür

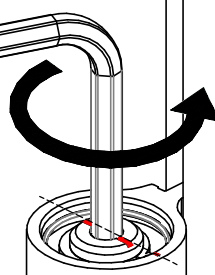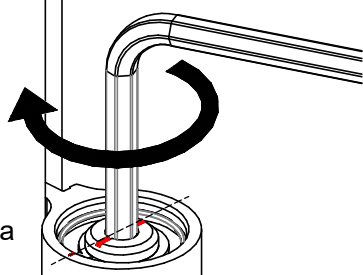


Right door
Porta Destra
Rechte Tür

12

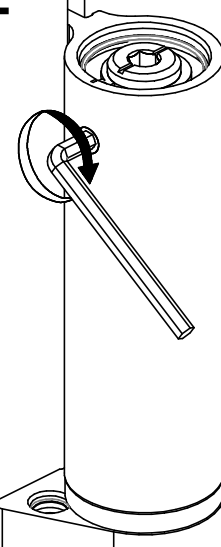

13

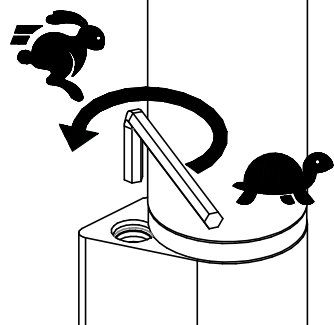


Closing speed adjustment

Regolazione della velocità di chiusura

Einstellung
Schließgeschwindigkeit

14

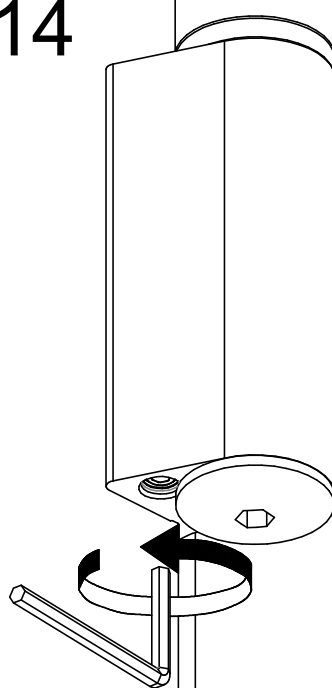

Final latch adjustment

Regolazione della scatto finale


Einstellung zweiter
Schließbereich/ Endschlag

15

Repeat the same step (8÷15) for the lower hinge

Ripetere le stesse operazioni dei punti (8÷15) per la cerniera inferiore

Schritte 8-15 für das untere Band wiederholen

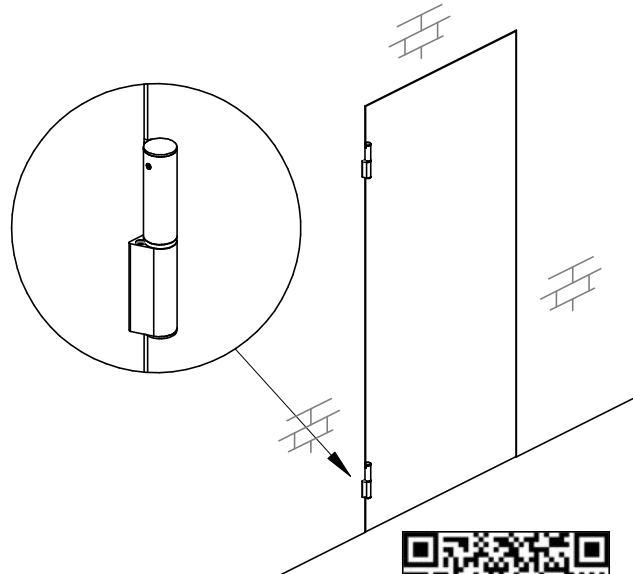

COLCOM®

