
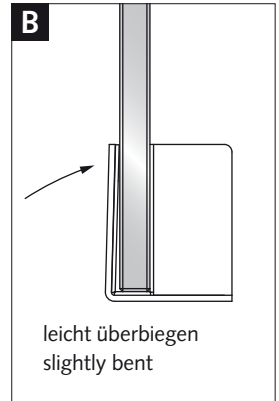


Überschub-Gegenkasten SO 37

Montageanleitung

WSS

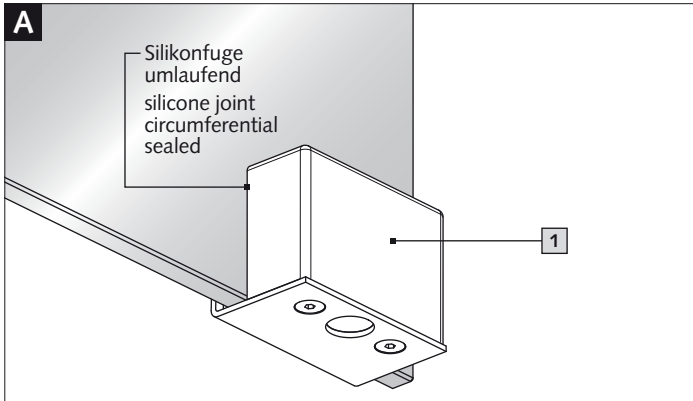

(D)

Montageanleitung

Überschub-Gegenkasten SO 37

Art.-Nr.: 32.502.0600.---

- Passend für 10 bis 12 mm Glasstärke.

⚠ ACHTUNG! Glas und Zwischenlagen müssen staub- und fettfrei sein, ggf. mit handelsüblichem Glasreiniger reinigen.

1. Gegenkasten mit Montagekonsole **1** über das Türblatt stecken. Bei 10 mm Glasstärke kann die Montagekonsole von Hand leicht zum Glas hin überbogen werden, um eine entsprechende Klemmwirkung zu ermöglichen (Abbildung B).
2. Optional kann der Artikel zusätzlich, umlaufend um die Montagekonsole **1**, mit Silikon gesichert werden.

WSS

WILH. SCHLECHTENDAHL
& SÖHNE GMBH & CO. KG

Hauptstraße 18-32
42579 Heiligenhaus

Postfach 10 05 52 / 62
42570 Heiligenhaus

Tel.: +49 (0) 20 56/17-0
Fax: +49 (0) 20 56/51 42

Web: www.wss.de
E-Mail: wss@wss.de

(GB)

Assembly Instruction

Slide Over Strike Box SO 37

Art.-N°: 32.502.0600.---

- Suitable for 10 to 12 mm glass thickness

⚠ ATTENTION! Glass and gaskets have to be dust- and grease free – if necessary, please clean with standard glass cleaner.

1. Insert strike box with mounting bracket **1** over the door leaf. For 10 mm glass thickness, manually bent the mounting bracket slight to the glass to achieve the needed clamping effect (fig. B).
2. In addition, the article can be secured optimally with silicone around the mounting bracket **1**.